

Assembling of Muon Handlebar;

Step 1;

Assemble all the parts together as shown, without any torque on the bolts.

View from the side;



View from the top;




Step 2;

After assembling as shown in step 1, you can easily turn the handlebar in your position and start to tighten the 2 **A** bolts and the **C** bolt in turn.



(Do not turn bolt B in this stadium of assembling!!!!!!)

The Torque on the **A** and **C** bolts are shown below;

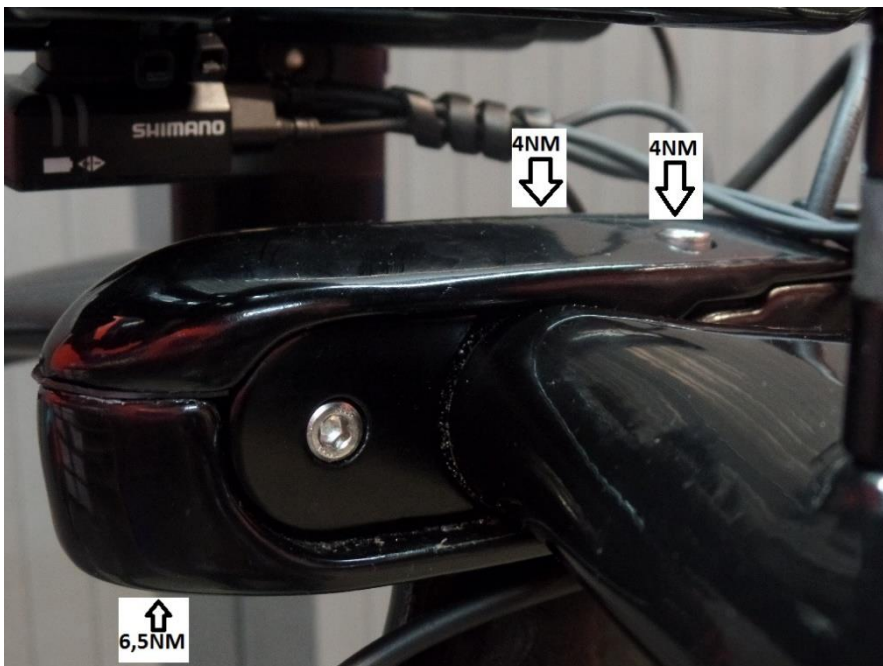

Step 3:

After tightening the bolts, **A** and **C** at the right torque, you may tighten the side bolt (**B**). The right torque is shown down below.



When the last bolt is Tightened you may use the bike.
You can start and challenge the elements.
Have fun!

If you want to demount the handlebar for travelling or maintenance?

Please use the following steps;

Step 1;

- First loosen bolt **B**, on the side. Please loose the bolt as much as is possible. There should be no torque on the bolt anymore.



Step 2:

- After loosening bolt **B**, please loosen bolt **C**. Make sure that the bolt is loose, but not completely

Step 3:

- After loosening bolt **C**, you can start loosen the 2 **A** bolts.
Make sure that the bolts are a bit loose, but not completely

Step 4:

- Now start loosen bolts **A** and bolt **C** in turn.

Step 5:

- Remove the bolts **A** and **C**. You can remove the cap

Step 6:

- Remove the handlebar and the clamp on the side.

You are ready for maintenance or packing further to travel all over the world.

**Always remove the complete handlebar when you want to move the bike!!!
Otherwise you will damage the grip on the stem and the handlebar. This is
not covered under warranty. Please demount as shown.**